


268.5 [10 9/16"]
265 [10 7/16"]


Touch 10 Retrofit Cutout Template

The Touch 10 Retrofit plate is used for retrofitting first generation CZone 10" Touch Screen with CZone Touch 10. The retrofit plate covers the larger cutout of the old touch panel (note Metal Backing frame supplied with Touch 10 not required). Ensure you have all parts below before proceeding.

1. Place Touch 10 retrofit cutout template over old 10" touch cutout using adhesive tape, ensure outer edges cover old cutout
2. Use a 4mm drill to cutout 4 holes for mounting screws
3. Cut along dotted line and remove inner section
4. Secure retrofit plate to mounting wall using supplied M4 screws, nuts and washers
5. Secure plastic mounting bracket (ensure TOP or BOTTOM engraved on bracket is correct) to retrofit plate using 20mm screws and screwdriver supplied with Touch 10
6. Insert Touch 10 into mounting bracket by hooking top of panel into bracket and pressing at bottom until clipped securely
7. To remove Touch 10 from bracket carefully insert large flathead screwdriver into slot on bottom edge of touch and twist gently until unclipped

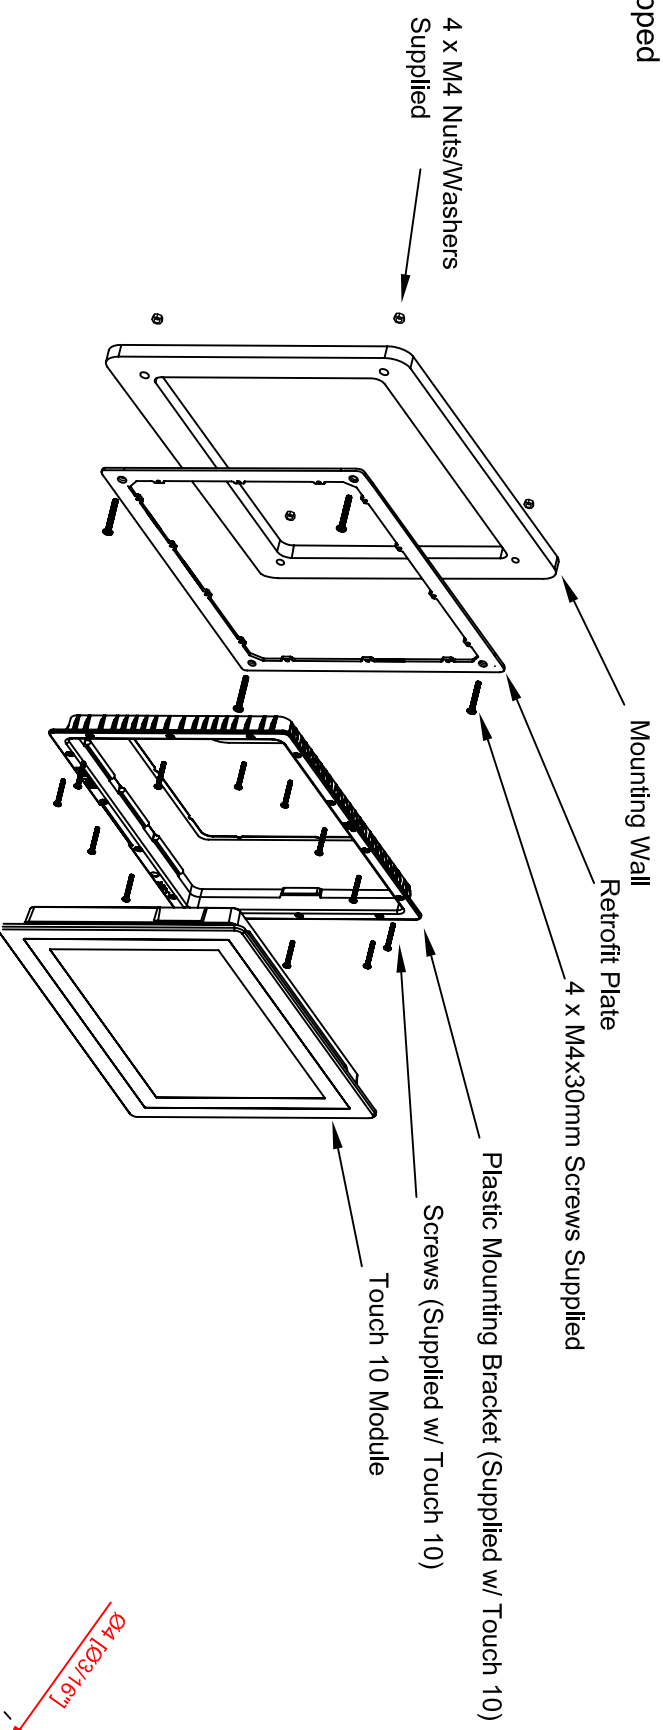

$\varnothing 4 [3/16"]$

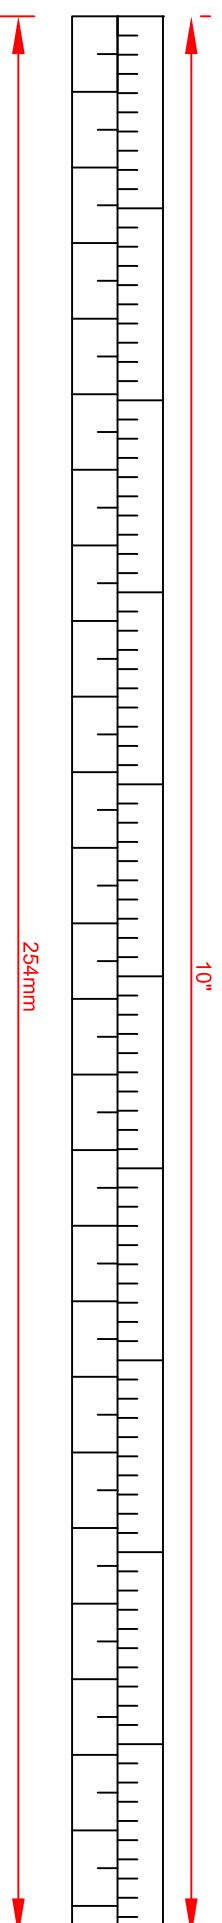

Do Not Scale! Print 1:1 - Check dimensions are correct before cutting!